

2000-2005 Honda S2000

ECU Pinout Diagram

| 3 | С | 01 | 71 | e | ct | or | A | | | | | | | C | oni | ne | cte | or | В | | | | | | (| Co | nn | ne | ct | or | C | | | | | C | or | m | ec | to | r D |
|---------|----|-----|----|----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|------------|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|----|-----|-----|-----|
| | A2 | 5 A | 26 | 27 | | A28 | A29 | A30 | A31 | | A32 | | B19 | B20 | | B21 | B22 | | B23 | B24 | B25 | | | C23 | C24 | C25 | | C26 | C27 | C28 | | C29 | C30 | C31 | D13 | D14 | D15 | | D16 | | |
| A12 A13 | A1 | 4 A | 15 | 16 | A17 | A18 | A19 | A20 | A21 | A22 | A23 | A24 | 89 | B10 | B11 | B12 | B13 | B14 | B15 | B16 | B17 | B18 | C11 | C12 | C13 | C14 | C15 | C16 | C17 | C18 | C19 | C20 | C21 | C22 | D6 | D7 | D8 | D9 | D10 | D11 | D12 |
| A1 A2 | A | 3 / | 4 | | A5 | A6 | A7 | | A8 | A9 | A10 | A11 | B1 | B2 | | B 3 | B4 | B5 | | B6 | B7 | B8 | C1 | C2 | C3 | C4 | | C5 | C6 | C7 | | CB | C9 | C10 | D1 | | D2 | D3 | D4 | | D5 |

Connector A

| Pin # | Name | Function | Signal Type |
|-------|----------------------|-----------------------------|-------------|
| A9 | Vehicle Speed Sensor | Vehicle speed sensor signal | Speed |
| A19 | Engine Speed Pulse | Engine speed pulse signal | Speed |
| A32 | Brake Switch | Brake switch signal | Analog |

Connector B

| Pin # | Name | Function | Signal Type |
|-------|---------------------|----------------------------|-------------|
| B1 | Power Source | 12V switched | Power |
| B2 | Power Ground | Chassis ground | Ground |
| В9 | Power Source | 12V switched | Power |
| B10 | Power Ground | Chassis ground | Ground |
| B12 | VTEC Solenoid Valve | Drives VTEC solenoid valve | Analog |
| B21 | Voltage Back Up | Permanent 12V | Power |

Connector C

| Pin # | Name | Function | Signal Type |
|-------|--------------------------------------|--|--------------|
| C10 | VTEC Pressure Switch | Detects VTEC pressure switch signal | Analog |
| C15 | Secondary O2 Sensor | Secondary oxygen sensor signal | Analog |
| C16 | Primary O2 Sensor | Primary oxygen sensor signal | Analog |
| C17 | MAP Sensor | Manifold absolute pressure sensor signal 0.32V @ -13.9 PSI 4.84V @ 10.94 PSI | Analog |
| C22 | Knock Sensor | Engine knock sensor signal | Knock, Audio |
| C25 | Intake Air Temperature Sensor | Air temperature sensor signal | Analog |
| C26 | Engine Coolant Temperature Sensor | Engine coolant temperature sensor signal | Analog |
| C27 | Throttle Position Sensor | Throttle position sensor signal | Analog |

Caution!

If you are not familiar with the vehicle's electrical systems, onboard sensors, and vehicle dynamics, DO NOT attempt to perform ANY installation of PLX Devices Inc. product(s). PLX Devices Inc. does not guarantee 100% accuracy, compatibility and specific application functionality of these documents. Use these documents as guidelines ONLY and refer to your vehicle's service manual for detailed information.

